



### Höhe des Fußrings (optional für Ausführung mit Counteruntergestell)

► Fußring verstellen: 1. Rändelschraube gegen den Uhrzeigersinn drehen – Fußring löst sich 2. Fußring in gewünschte Position verschieben 3. Rändelschraube im Uhrzeigersinn festdrehen

### Height of the footring (optional for counter underframe version)

► Adjusting the footring: 1. Turn the knurled screw anticlockwise – the footring loosens 2. Move the footring to the desired position 3. Tighten the knurled screw clockwise

### Hauteur du cercle repose-pied (en option pour la version dotée d'un support)

► Régler le cercle repose-pied : 1. Tourner la vis moletée dans le sens anti-horaire – le cercle repose-pied se détache 2. Placer le cercle repose-pied dans la position désirée 3. Serrer la vis moletée à fond dans le sens des aiguilles d'une montre

### Hoogte van de voetring (optioneel voor uitvoering met balie-onderstel)

► Voetring verstellen: 1. Kartelschroef tegen de wijzers van de klok in draaien – voetring komt los 2. Voetring in gewenste positie verschuiven 3. Kartelschroef met de wijzers van de klok mee vastdraaien

### Altezza dell'anello poggiapiedi (su richiesta per la versione con struttura counter)

► Per regolare l'anello poggiapiedi: 1. Ruotare la vite a testa zigrinata in senso antiorario – il poggiapiedi si allenta 2. Spostare il poggiapiedi nella posizione desiderata 3. Stringere forte la vite a testa zigrinata in senso orario

### Altura del anillo reposapiés (opcional, para modelos con base de mostrador)

► Ajustar el anillo reposapiés: 1. Girar el tornillo de cabeza moleteada en el sentido contrario a las agujas del reloj: el anillo reposapiés se afloja 2. Deslizar el anillo reposapiés hasta la posición deseada 3. Apretar el tornillo de cabeza moleteada girándolo en el sentido de las agujas del reloj

## Indicaciones para el usuario

### Aplicación

Este sillón de oficina giratorio es adecuado para personas con un peso corporal de hasta 110 kg y debe utilizarse de acuerdo con las instrucciones y siguiendo las normas generales de cuidado. En caso de utilizarse indebida (p. ej., subiéndose a ella, sentándose en los apoyabrazos o carga unilateral extrema) existe peligro de accidente.

Desbloquear el respaldo cuando la silla no esté en uso.

### Ruedas

Antes del primer uso se debe retirar la protección de color para el transporte. Para su seguridad y para los diversos recubrimientos de suelo, existen diferentes tipos de ruedas: ruedas con superficie dura para suelos textiles (de serie), ruedas con superficie blanda para todos los suelos no textiles. Cambio de las ruedas: extraiga o inserte sencillamente las ruedas; antes de ello, engrase ligeramente el perno basculante.

### Otras informaciones

Consulte informaciones sobre el montaje o la sustitución de los reposabrazos, así como la limpieza de los componentes de plástico y los tapizados en Internet en el sitio [www.sedus.com](http://www.sedus.com)

# English

Please read the following information on adjusting the chair properly so that you can enjoy all the ergonomic advantages netwin has to offer.



## A Height of the seat

- ▶ Lowering the seat: 1. Sit down on the seat 2. Pull the lever upwards (the seat will drop slowly) 3. Releasing the lever at the desired height will lock the position
- ▶ Raising the seat: 1. Stand up 2. Pull the lever upwards (the seat will rise slowly) 3. Releasing the lever at the desired height will lock the position



## B Height of the lumbar support

- ▶ Adjusting the height: 1. Do not lean against the backrest 2. Adjust the handles on both sides to the desired height



### **C Angle of the backrest**

- ▶ Adjusting the backrest dynamically: 1. Pull the lever upwards and release it 2. Lean against the backrest 3. The backrest is free-flowing
- ▶ Locking the backrest into position: 1. Lean back until the backrest reaches the desired angle 2. Press the lever down and release it to lock the backrest into position
- ▶ Release the backrest lock when the chair is not in use



### **D Strength of the backrest pressure**

- ▶ 1. Adjusting the backrest dynamically (C) 2. Exert only slight pressure on the seat and backrest 3. Crank the quick adjustment mechanism downwards until the desired position is achieved (greater backrest pressure) or upwards (lesser backrest pressure)



### **E Depth of the seat (optional)**

- ▶ 1. Press the finger plate and hold it fast 2. Push the cushion to the desired position 3. Release the finger plate, and the seat will engage



## **F Seat angle (optional)**

- ▶ 1. Stand up 2. Swivel the lever backwards and lock into place (chair tilts 4° forwards) or swivel downwards and lock into place (seat moves back into its original position)



## **G Adjusting the basic armrests (optional)**

- ▶ Height: 1. Press the button underneath the armrest, lift or lower the armrest 2. Release the button, the armrest locks into place
- ▶ Adjustable seat width: 1. Loosen the screws slightly with a Torx key (TX40) 2. Position the armrests 3. Retighten the screws



## **H Adjusting the 4D armrests (optional)**

- ▶ Height: 1. Press and hold the button 2. Lift or lower the armrest to the desired height 3. Release the button to engage the armrest
- ▶ Depth: 1. Press and hold the button 2. Push the armrest cover backwards or forwards to engage
- ▶ Swivelling armrest covers: up to 24° inwards and 12° outwards
- ▶ Adjustable seat width: 1. Slightly loosen the lever on the armrest support under the seat. 2. Position the armrests 3. Retighten the lever